



**EP450™**  
Portable Radio User Guide

## **COMPUTER SOFTWARE COPYRIGHTS**

The Motorola products described in this manual may include copyrighted Motorola computer programs stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola certain exclusive rights for copyrighted computer programs including, but not limited to, the exclusive right to copy or reproduce in any form the copyrighted computer program. Accordingly, any copyrighted Motorola computer programs contained in the Motorola products described in this manual may not be copied, reproduced, modified, reverse-engineered, or distributed in any manner without the express written permission of Motorola. Furthermore, the purchase of Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents or patent applications of Motorola, except for the normal non-exclusive license to use that arises by operation of law in the sale of a product.

# CONTENTS

Computer Software Copyrights . . . inside cover	Indicator Tones . . . . . 15
<b>Safety . . . . . 3</b>	Programmable Buttons . . . . . 16
Product Safety and RF Exposure Compliance . . . . . 3	<b>Getting Started . . . . . 19</b>
<b>Introduction . . . . . 5</b>	Turn the Radio On or Off . . . . . 19
Conventional Radio Systems . . . . . 5	Adjust the Volume . . . . . 19
EP450™ Radio Features . . . . . 5	Select a Radio Channel . . . . . 19
Radio Wide Features . . . . . 5	Receive . . . . . 20
Signaling Features . . . . . 5	Monitor . . . . . 20
<b>Radio Overview . . . . . 7</b>	Permanent Monitor . . . . . 20
Accessory Information . . . . . 8	Transmit . . . . . 21
Attach the Battery . . . . . 8	Repeater or Talkaround Mode . . . . . 21
Remove the Battery . . . . . 8	VOX Operation . . . . . 21
Attach the Antenna . . . . . 9	Connecting a VOX Headset . . . . . 21
Remove the Antenna . . . . . 9	Enable or Disable VOX . . . . . 21
Attach the Belt Clip . . . . . 10	Enable/Disable Headset Sidetone . . . . . 22
Remove the Belt Clip . . . . . 10	VOX Headset . . . . . 22
Battery Information . . . . . 11	Non-VOX Headset with In-Line PTT . . . . . 22
Charging Your Battery . . . . . 11	Escalart. . . . . 23
Rapid Charger . . . . . 12	Set Squelch Level . . . . . 23
Battery Charge Status . . . . . 13	Set Power Level . . . . . 23
LED Indicator . . . . . 14	Option Board On/Off . . . . . 23

<b>Radio Calls</b>	<b>25</b>
Selective Radio Inhibit	25
Receive a Selective Call	25
Receive a Call Alert™ Page	25
<b>Scan</b>	<b>27</b>
Talkback	27
Start System Scan	27
Stop System Scan	27
Start Auto Scan	27
Stop Auto Scan	28
Delete a Nuisance Channel	28
Restore Channels to the Scan List	28
<b>Warranty</b>	<b>29</b>
Limited Warranty	29
<b>Accessories</b>	<b>33</b>
Antennas	33
Audio Accessory	33
Batteries	33
Carry Accessories	33
Chargers	34
Headsets	34
Surveillance Accessories	35
Remote Speaker Microphones	36
Miscellaneous	36

## SAFETY

### PRODUCT SAFETY AND RF EXPOSURE COMPLIANCE



Before using this product, read the operating instructions for safe usage contained in the Product Safety and RF Exposure booklet enclosed with your radio.

#### ATTENTION!

**This radio is restricted to occupational use only to satisfy FCC RF energy exposure requirements.** Before using this product, read the RF energy awareness information and operating instructions in the Product Safety and RF Exposure booklet enclosed with your radio (Motorola Publication part number 68P81095C98) to ensure compliance with RF energy exposure limits.

For a list of Motorola-approved antennas, batteries, and other accessories, visit the following web site which lists approved accessories: <http://www.motorola.com/cgiss/index.shtml>.

**Notes:**

## INTRODUCTION

### CONVENTIONAL RADIO SYSTEMS

Conventional radio systems typically refer to unit-to-unit communications through a single channel. Conventional systems also allow radio users to extend communication coverage by relaying their messages through a repeater. To ensure coordinated use by multiple users, each radio user must monitor the channel or repeater before transmitting to verify that the system is not currently busy.

### EP450™ RADIO FEATURES

#### Radio Wide Features

- 16 Channels
- 2 Programmable Feature Buttons
- Option Board Expandability
- Busy Channel Lockout
- High/Low Power Settings
- Transmit Time-Out Timer
- Monitor and Sticky Permanent Monitor
- System Scan with 2 Priority Levels and Revert Scan

 
#### Signaling Features

- MDC-1200 Signaling
  - Selective Radio Inhibit Decode
  - PTT-ID Encode
- Quik-Call II Signaling
  - Call Alert Decode
  - Selective Call Decode
- DTMF Signaling
  - DTMF PTT-ID Encode

**Notes:**




## RADIO OVERVIEW

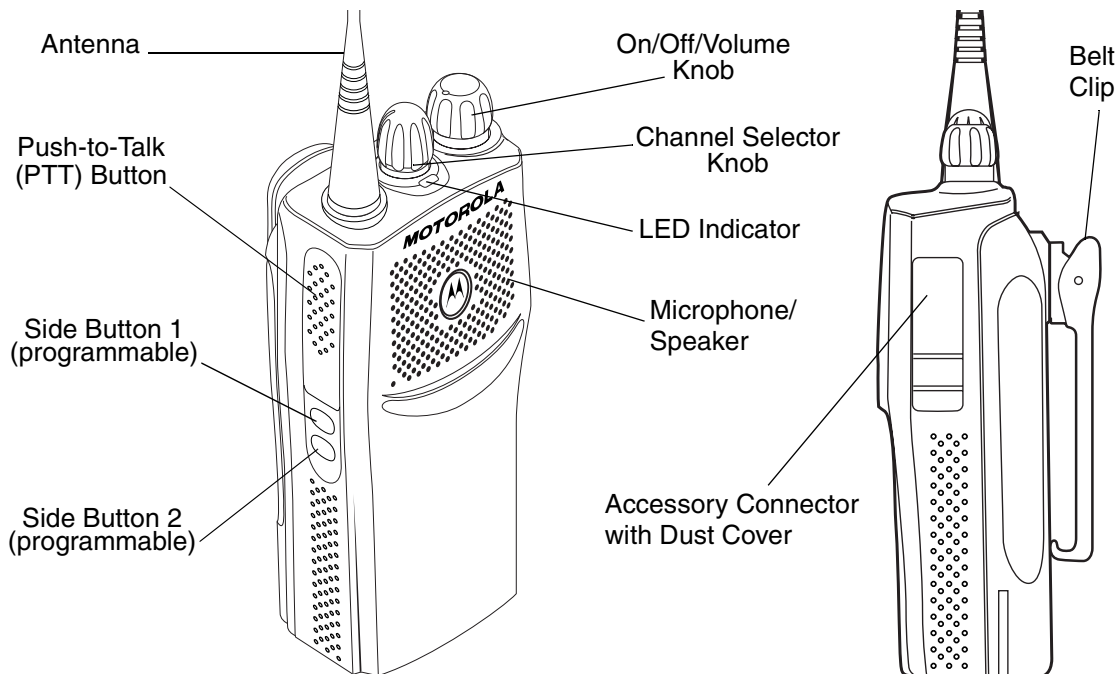


## ACCESSORY INFORMATION
 
### Attach the Battery

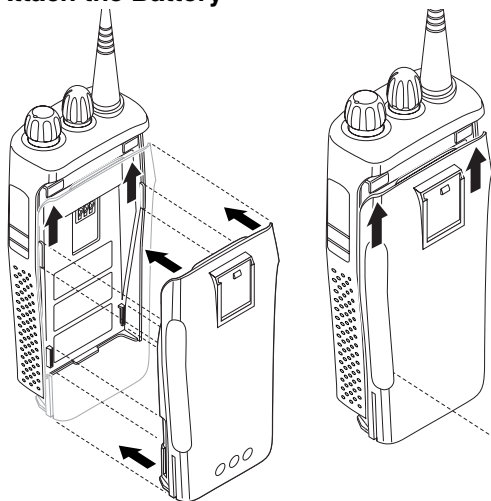


- 1 Align the battery to the battery rails on the back of the radio (approximately 1/2 in. from the top of the radio.)
- 2 Press the battery firmly to the radio and slide the battery upward until the latch snaps into place.
- 3 Slide the battery latch, located on radio bottom, into the lock position.

### Remove the Battery

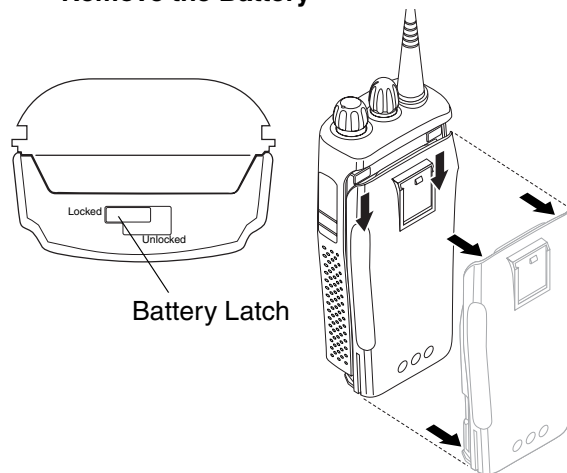 


- 1 Turn off the radio if it is turned on (see page 19).
- 2 Slide the battery latch into the unlock position. Disengage by pushing downward and holding the latch towards the front of the radio.
- 3 With the battery latch disengaged, slide the battery down from the top of the radio about 1/2 in. Once the battery is free from the battery rails, lift it directly away from the radio.

## Attach the Antenna

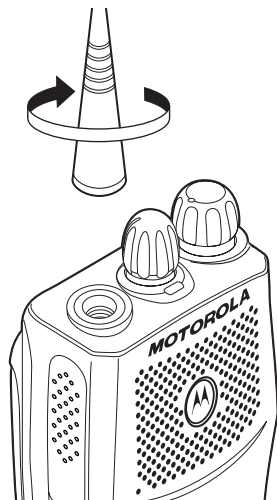 


Turn the antenna clockwise to attach it.

## Remove the Antenna

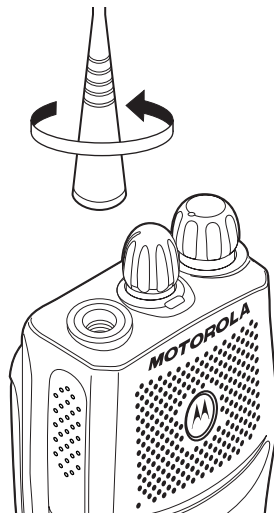 


Turn the antenna counter-clockwise to remove it.

### Attach the Belt Clip

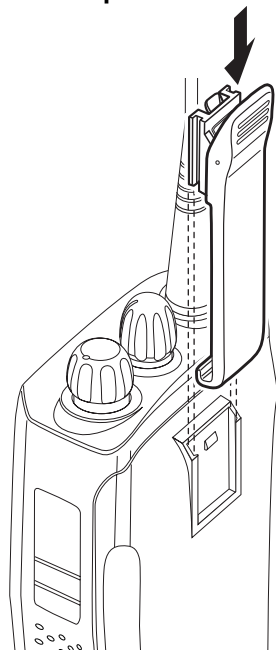 

- 1 Align the grooves of the belt clip with those of the battery.
- 2 Press the belt clip downward until you hear a click.

### Remove the Belt Clip

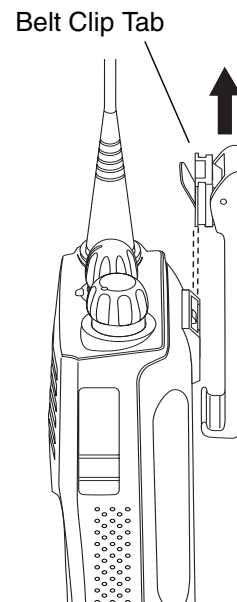 

- 1 Use a key to press the belt clip tab away from the battery to unlock the belt clip.
- 2 Slide the belt clip upward to remove it.

## BATTERY INFORMATION

### Charging Your Battery

This radio is powered by a nickel-cadmium (Ni-Cd), a nickel-metal hydride (NiMH), or a lithium-ion (Li-Ion) rechargeable battery. Charge the battery before use to ensure optimum capacity and performance. The battery was designed specifically to be used with a Motorola charger. Charging in non-Motorola equipment may lead to battery damage and void the battery warranty.

**Note:** When charging a battery attached to a radio, turn the radio off to ensure a full charge.

The battery should be at about 77°F (25°C) (room temperature), whenever possible. Charging a cold battery (below 50° F [10°C]) may result in leakage of electrolyte and ultimately in failure of the battery. Charging a hot battery (above 95°F [35°C]) results in reduced discharge capacity, affecting the performance of the radio. Motorola rapid-rate battery chargers contain a temperature-sensing circuit to ensure that batteries are charged within the temperature limits stated above.

If a battery is new, or its charge level is very low, you will need to charge it before you can use it. When the battery level is low and the radio is in transmit mode you will see the LED indicator flash red. Upon release of the PTT button, you will hear an alert tone.

**Note:** Batteries are shipped uncharged from the factory. Always charge a new battery 14 to 16 hours before initial use, regardless of the status indicated by the charger.

## RAPID CHARGER

- 1 Turn the radio off.
- 2 Place the battery, with or without the radio, in the charger pocket.
  - The charger LED indicates the charging progress.

LED color	Status
No LED Indication	Battery inserted incorrectly or battery not detected.
Single Green Flash	Successful charger power-up.
Flashing Red <sup>a</sup>	Battery unchargeable or not making proper contact.
Steady Red	Battery is in Rapid charge mode.
Flashing Yellow	Battery in charger but waiting to be charged. The battery temperature may be too hot or too cold. The voltage may be lower than the pre-determined threshold level for charging.
Flashing Green <sup>b</sup>	Battery 90% (or more) charged. Trickle charging.
Green	Battery fully charged.

- a. Remove the battery from the charger and use a pencil eraser to clean the three metal contacts at the back of the battery. Place the battery back into the charger. If the LED indicator continues to flash red, replace the battery.

- b. A standard battery may require 90 minutes to charge to 90% capacity. Even though new batteries might prematurely indicate a full charge (steady green LED), charge the battery for 14 to 16 hours prior to initial use for best performance.

A list of Motorola authorized batteries and battery chargers appears on page 34. The listed chargers will charge only Motorola authorized batteries. Other batteries may not charge.

## BATTERY CHARGE STATUS

You can check battery charge status if your dealer has preprogrammed one of the programmable buttons. Hold down the preprogrammed **Battery Indicator** button. The charge status is shown by the color of the radio's LED indicator.

Battery Level	LED Indicator
Good	Green
Sufficient	Yellow
Low	Flashing Red
Very Low	None

## LED INDICATOR

Indicates power-up, transmit, receive, scan monitor status, channel busy, Call Alert™ receive/transmit, Selective Call receive/transmit, and battery status.







LED State/Color	Indication
<b>Radio Call</b>	
Red	Transmitting
Flashing Red	Receiving
Flashing Red	Channel Busy
<b>Scan</b>	
Flashing Green	Scanning for activity
<b>Call Alert</b>	
Flashing Yellow	Indicates receiving a Call Alert

LED State/Color	Indication
<b>Selective Call</b>	
Flashing Yellow	Indicates receiving a Selective Call
<b>Monitor/Open Squelch</b>	
Yellow	While monitoring
<b>Low Battery</b>	
Flashing Red when transmitting	Low battery level



## INDICATOR TONES

High pitched tone  Low pitched tone 

	Self Test Pass Tone
	Self Test Fail Tone
	Positive Indicator Tone
	Negative Indicator Tone
	Good Key Tone
	Bad Key Tone

Some programmable buttons use tones to indicate one of two modes:

Programmable Buttons	Positive Indicator Tone	Negative Indicator Tone
Scan	<b>Start</b>	<b>Stop</b>
Power Level	<b>High</b>	<b>Low</b>
Squelch	<b>Tight</b>	<b>Normal</b>
Repeater/ Talkaround	<b>Does not use</b> repeater	<b>Uses</b> repeater
VOX	<b>Enabled</b>	<b>Disabled</b>
Silent Monitor/ Open Squelch	—	<b>Enabled</b>
Option Board	<b>Enabled</b>	<b>Disabled</b>
Escalart	<b>Enabled</b>	<b>Disabled</b>

## PROGRAMMABLE BUTTONS

Your radio has two programmable buttons. Your dealer can program these buttons as shortcuts to various radio features.

Check with your dealer for a complete list of functions your radio supports.

Programmable buttons include:

- The two side buttons (S1 and S2)

Some buttons can access up to two features, depending on the type of button press:

- **Short Press** — quickly pressing and releasing the programmable buttons.
- **Long Press** — pressing and holding the programmable buttons for a minimum of 2.5 seconds.
- **Hold Down** — pressing and holding down the programmable buttons while checking status or making adjustments.

The table on page 17 summarizes the programmable features available and shows the page number where the feature is explained.

In the “Button” column, have your dealer record the name of the programmable button next to the feature that has been programmed to it.

The dealer can use the abbreviations (S1, S2,) shown in the radio illustration on page 7.

Also, where appropriate, have your dealer indicate whether the button press requires a short press, a long press, or needs to be held down.

## Programmable Features

Feature	Indicator	Short Press	Long Press	Hold Down	Page	Button
Battery Indicator	LED	—	—	Checks the battery charge status.	13	
Volume Set	—	—	—	Sounds a tone for adjusting the radio's volume level.	19	
Monitor	—	A long press initiates Monitor. A short press cancels Monitor.		Monitors the selected channel for any activity.	20	
Repeater/Talkaround	—	Toggles between using a repeater or transmitting directly to another radio. <sup>†</sup>		—	21	
Voice Operated Transmission (VOX)	—	Toggle VOX on and off. <sup>†</sup>		—	21	
Escalert	—	Toggle escalert on and off. <sup>†</sup>		—	23	
Squelch	—	Toggle squelch level between tight and normal squelch. <sup>†</sup>		—	23	

<sup>†</sup> This function is activated by EITHER a short OR a long press, but not both.

 
### Programmable Features (Continued)

Feature	Indicator	Short Press	Long Press	Hold Down	Page	Button
Power Level	—	Toggle transmit power level between High and Low power.†		—	23	
Option Board	—	Toggle the option board on and off.†		—	23	
Scan/Nuisance Channel Delete	—	Starts or stops the Scan operation.	Deletes a nuisance channel while scanning.	—	27,27	

† This function is activated by EITHER a short OR a long press, but not both.

## GETTING STARTED

### TURN THE RADIO ON OR OFF

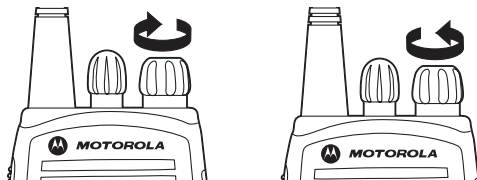

ON	OFF
<p>Rotate the <b>On/Off/Volume</b> knob clockwise. If power-up is successful, you will hear the Self-Test Pass Tone ( <input type="checkbox"/><input type="checkbox"/> ) and see the LED flash green. If the radio fails to power up, you will hear the Self Test Fail Tone ( <input type="checkbox"/> ). The radio will need to be returned for re-programming.</p>	<p>Rotate the <b>On/Off/Volume</b> knob counter-clockwise until you hear a click and the LED indicator turn off.</p>

### ADJUST THE VOLUME

Turn the **On/Off/Volume Control** knob clockwise to increase the volume, or counterclockwise to decrease the volume.

—or—

**Note:** Your dealer can preprogram one of the programmable buttons to Volume Set.

- 1 Hold down the **Volume Set** button (see page 17).
  - You will hear a continuous tone.
- 2 Turn the **On/Off/Volume** knob to the desired volume level.
- 3 Release the **Volume Set** button.

### SELECT A RADIO CHANNEL

Your radio offers 16 channels.

To select a channel, turn the **Channel Selector** knob clockwise or counterclockwise until you reach the desired channel.

## RECEIVE

- 1 Turn your radio on.
- 2 Adjust the radio's volume (see page 19).
- 3 Switch to the desired channel.
  - Make sure the **PTT** button is released.
- 4 Listen for voice activity.
  - The LED indicator flashes red while your radio is receiving.
- 5 To respond, hold the radio vertically 1 to 2 inches (2.5 to 5cm) from your mouth. Press the **PTT** button to talk; release it to listen.

## MONITOR

It is important to monitor for traffic before transmitting to ensure that you do not “talk over” someone who is already transmitting.

- 1 Press and hold the preprogrammed **Monitor** button to access channel traffic.
  - If no activity is present, you will hear “white noise.”

- 2 Once channel traffic has cleared, proceed with your call by pressing the **PTT** button.

---

### Permanent Monitor

- 1 A long press of the preprogrammed **Monitor** button places the radio in Permanent Monitor mode.
    - You hear a good key tone.
  - 2 A short press of the **Monitor** button cancels Permanent Monitor mode and returns the radio to normal operation.
-

## TRANSMIT

- 1 Turn your radio on.
- 2 Use the **Channel Selector** knob to select the desired channel.  
**Note:** Monitor for traffic before transmitting to ensure that you do not “talk over” someone who is already transmitting
- 3 Hold the radio vertically 1 to 2 inches (2.5 to 5cm) from your mouth. Press the **PTT** button to talk.
  - The LED indicator lights steady red while the call is being sent.
- 4 Release the **PTT** to listen.

## REPEATER OR TALKAROUND MODE

Talkaround Mode enables you to communicate with another radio when either:

- The repeater is not operating.
- or—
- Your radio is out of the repeater’s range but within communicating distance of another radio.

### To Select either Repeater Mode or Talkaround Mode

Press the preprogrammed **Repeater/Talkaround** button (see page 17) to toggle between Repeater Mode and Talkaround Mode.

## VOX OPERATION

When hands-free operation is desired, your radio can transmit by voice alone using the VOX feature when you speak through an accessory that is connected to your radio.

### Connecting a VOX Headset

- 1 Turn off your radio.
- 2 Connect the VOX accessory to your radio and turn the radio on.

### Enable or Disable VOX

To enable or disable VOX operation, press the preprogrammed **VOX** button (see page 17).

**Note:** Pressing the **PTT** button disables VOX.

— or —

You can select channels to enable or disable VOX as preprogrammed by your dealer/programmer.

- 1 Select a channel that has been preprogrammed by your dealer to enable VOX.

**Note:** Pressing the **PTT** button disables VOX.

- 2 Select a channel that has not been preprogrammed by your dealer to disable VOX.

## ENABLE/DISABLE HEADSET SIDETONE

Your dealer can program your radio so you can hear your voice through a headset while you speak.

### VOX Headset

- 1 To enable the headset sidetone, turn off your radio.
- 2 Connect the VOX headset accessory to your radio.

- 3 Turn the radio on. During transmit, you will hear your voice through the headset while you speak.

- 4 To disable the headset sidetone, turn off your radio and turn the radio on again.

### Non-VOX Headset with In-Line PTT

- 1 To enable the headset sidetone, turn off your radio.

- 2 Connect the non-VOX accessory to your radio.

- 3 Press and hold the In-line PTT on your headset.

- 4 Turn the radio on and release the PTT once the radio has completed start-up. During transmit, you will hear your voice through the headset while you speak.

- 5 To disable the headset sidetone, turn off your radio and turn the radio on again.



## ESCALERT

You can program your radio to increase the volume of the alarm tones when a radio call is not answered.

Press the preprogrammed **Escalert** button (see page 17).

## SET SQUELCH LEVEL

Use this feature to filter out (unwanted) calls and/or background noise. However, tightening squelch could cause calls from remote locations to be filtered out as well. In this case, normal squelch may be more desirable.

Press the preprogrammed **Squelch** button (see page 17) to toggle between tight and normal squelch.

## SET POWER LEVEL

Each channel in your radio has a predefined transmit power level that can be changed.

To set the power level, press the preprogrammed **Power Level** button (see page 17) to toggle between low and high power.

## OPTION BOARD ON/OFF

Use this feature to enable or disable an option board.

Press the preprogrammed **Option Board** button (see page 17) to toggle the option board

**Notes:**

## RADIO CALLS

### SELECTIVE RADIO INHIBIT

Your radio is equipped with a security feature that can temporarily render the unit inoperative when an inhibit signal is sent from the base station.

This feature is commonly used to disable radios:

- In case of theft
- For system control reasons

When your radio has been rendered inoperative by the base station, all controls will be inoperative except for the **On/Off** button and the display shows INHIBIT.

### RECEIVE A SELECTIVE CALL

When you receive a selective call:

- The LED indicator flashes yellow, if programmed by your dealer/programmer.
- You hear two high-pitched tones.

1 To acknowledge the call, press and release the **PTT** button.

2 Press and hold the **PTT** button to talk; release to listen.

### RECEIVE A CALL ALERT™ PAGE

When you receive a Call Alert page:

- The LED indicator flashes yellow, if programmed by your dealer/programmer.
- You hear four high-pitched tones.

To acknowledge the page, press and release the **PTT** button; to cancel the page, press any other key.

**Notes:**

## SCAN

Your radio is equipped with the Scan feature, which allows you to monitor multiple channels for voice activity. The radio will stop on a channel when it detects activity on it.

Your radio automatically switches to a channel, within the scan list, when it detects activity.

- The LED indicator blinks green during scan mode; it stops blinking when the radio switches to an active channel.

There are two types of Scan available in your radio:

- System Scan
- Auto Scan

### TALKBACK

The Talkback feature allows you to respond to a transmission while scanning. If transmission is detected on a channel while scanning, the radio will stop on that channel for a default period of time after activity has ceased. This is referred to as “hangtime”. During this hangtime you may respond by pressing the **PTT** button.

**Note:** The LED scan indicator stops blinking while the radio is in hangtime. If the **PTT** button is not pressed after the preprogrammed hangtime, the radio returns to scanning channels.

### START SYSTEM SCAN

Press the preprogrammed **Scan** button to start scan (see page 15).

### STOP SYSTEM SCAN

Press the preprogrammed **Scan** button to stop System Scan (see page 15).

**Note:** Your dealer/programmer can preprogram your radio when exiting System Scan to automatically revert to the last scan channel that had activity on it or to automatically revert to the channel where scan was initiated.

### START AUTO SCAN

Auto Scan automatically starts scanning once a channel with Auto Scan enabled is selected.

Select a channel that has been preprogrammed for Auto Scan by your dealer/programmer.

## STOP AUTO SCAN

Select a channel that has not been preprogrammed for Auto Scan by your dealer/programmer.

## DELETE A NUISANCE CHANNEL

**Note:** Your dealer/programmer must preprogram a button to access this feature (see page 18).

If a channel continually generates unwanted calls or noise (a “nuisance” channel), you can temporarily remove it from the scan list:

- 1 While the radio is on the Nuisance Channel, press the preprogrammed **Nuisance Channel Delete** button until you hear a tone.
- 2 Release the **Nuisance Channel Delete** button. The nuisance channel is deleted.

**Note:** You cannot temporarily delete the channel that has been preprogrammed by your dealer/programmer as your designated scan channel, a priority channel, or the last remaining channel in the scan list.

## Restore Channels to the Scan List

- 1 Power off the radio. Once the radio is powered on again, the deleted nuisance channels are restored to the scan list.

– or –

- 1 Press the preprogrammed **Scan** button to stop the scan.
- 2 Press the preprogrammed **Scan** button again to start scanning again. The Deleted Nuisance Channels are restored to the scan list.

– or –

- 1 Select a channel that has **not** been preprogrammed for scan by your dealer / programmer to stop Scan. Once you return to the original channel, the deleted nuisance channels are restored to the scan list.

## WARRANTY

### LIMITED WARRANTY MOTOROLA COMMUNICATION PRODUCTS

#### I. WHAT THIS WARRANTY COVERS AND FOR HOW LONG:

MOTOROLA INC. ("MOTOROLA") warrants the MOTOROLA manufactured Communication Products listed below ("Product") against defects in material and workmanship under normal use and service for a period of time from the date of purchase as scheduled below:

EP450 Portable Units	Two (2) Years
Product Accessories	One (1) Year

Motorola, at its option, will at no charge either repair the Product (with new or reconditioned parts), replace it (with a new or reconditioned Product), or refund the purchase price of the Product during the warranty period provided it is returned in accordance with the terms of this warranty. Replaced parts or boards are warranted

for the balance of the original applicable warranty period. All replaced parts of Product shall become the property of MOTOROLA.

This express limited warranty is extended by MOTOROLA to the original end user purchaser only and is not assignable or transferable to any other party. This is the complete warranty for the Product manufactured by MOTOROLA.

MOTOROLA assumes no obligations or liability for additions or modifications to this warranty unless made in writing and signed by an officer of MOTOROLA. Unless made in a separate agreement between MOTOROLA and the original end user purchaser, MOTOROLA does not warrant the installation, maintenance or service of the Product.

MOTOROLA cannot be responsible in any way for any ancillary equipment not furnished by MOTOROLA which is attached to or used in connection with the Product, or for operation of the Product with any ancillary equipment, and all such equipment is expressly excluded from this warranty. Because each system which may use the Product is unique, MOTOROLA disclaims liability for range, coverage, or operation of the system as a whole under this warranty.

## II. GENERAL PROVISIONS:

This warranty sets forth the full extent of MOTOROLA'S responsibilities regarding the Product. Repair, replacement or refund of the purchase price, at MOTOROLA's option, is the exclusive remedy. THIS WARRANTY IS GIVEN IN LIEU OF ALL OTHER EXPRESS WARRANTIES. IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION, IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY. IN NO EVENT SHALL MOTOROLA BE LIABLE FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT, FOR ANY LOSS OF USE, LOSS OF TIME, INCONVENIENCE, COMMERCIAL LOSS, LOST PROFITS OR SAVINGS OR OTHER INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE SUCH PRODUCT, TO THE FULL EXTENT SUCH MAY BE DISCLAIMED BY LAW.

## III. STATE LAW RIGHTS:

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL

OR CONSEQUENTIAL DAMAGES OR LIMITATION ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION OR EXCLUSIONS MAY NOT APPLY.

This warranty gives specific legal rights, and there may be other rights which may vary from state to state.

## IV. HOW TO GET WARRANTY SERVICE:

You must provide proof of purchase (bearing the date of purchase and Product item serial number) in order to receive warranty service and, also, deliver or send the Product item, transportation and insurance prepaid, to an authorized warranty service location. Warranty service will be provided by Motorola through one of its authorized warranty service locations. If you first contact the company which sold you the Product (e.g., dealer or communication service provider), it can facilitate your obtaining warranty service. You can also call Motorola at 1-800-927-2744 US/Canada.



## V. WHAT THIS WARRANTY DOES NOT COVER:

- A) Defects or damage resulting from use of the Product in other than its normal and customary manner.
- B) Defects or damage from misuse, accident, water, or neglect.
- C) Defects or damage from improper testing, operation, maintenance, installation, alteration, modification, or adjustment.
- D) Breakage or damage to antennas unless caused directly by defects in material workmanship.
- E) A Product subjected to unauthorized Product modifications, disassembles or repairs (including, without limitation, the addition to the Product of non-Motorola supplied equipment) which adversely affect performance of the Product or interfere with Motorola's normal warranty inspection and testing of the Product to verify any warranty claim.
- F) Product which has had the serial number removed or made illegible.
- G) Rechargeable batteries if:
  - 1) any of the seals on the battery enclosure of cells are broken or show evidence of tampering.
  - 2) the damage or defect is caused by charging or using the battery in equipment or service other than the Product for which it is specified.
- H) Freight costs to the repair depot.
- I) A Product which, due to illegal or unauthorized alteration of the software/firmware in the Product, does not function in accordance with MOTOROLA's published specifications or the FCC type acceptance labeling in effect for the Product at the time the Product was initially distributed from MOTOROLA.
- J) Scratches or other cosmetic damage to Product surfaces that does not affect the operation of the Product.
- K) Normal and customary wear and tear.

## VI. PATENT AND SOFTWARE PROVISIONS:

MOTOROLA will defend, at its own expense, any suit brought against the end user purchaser to the extent that it is based on a claim that the Product or parts infringe a United States patent, and MOTOROLA will pay those costs and damages finally awarded against the end user purchaser in any such suit which are attributable to any such claim, but such defense and payments are conditioned on the following:

- A) that MOTOROLA will be notified promptly in writing by such purchaser of any notice of such claim;
- B) that MOTOROLA will have sole control of the defense of such suit and all negotiations for its settlement or compromise; and
- C) should the Product or parts become, or in MOTOROLA's opinion be likely to become, the subject of a claim of infringement of a United States patent, that such purchaser will permit MOTOROLA, at its option and expense, either to procure for such purchaser the right to continue using the Product or parts or to replace or modify the same so that it becomes non-infringing or to grant such purchaser a credit for the Product or parts as depreciated and accept its return. The depreciation will be an equal amount per year over the lifetime of the Product or parts as established by MOTOROLA.

MOTOROLA will have no liability with respect to any claim of patent infringement which is based upon the combination of the Product or parts furnished hereunder with software, apparatus or devices not furnished by MOTOROLA, nor will MOTOROLA have any liability for the use of ancillary equipment or software not furnished by MOTOROLA which is attached to or used in

connection with the Product. The foregoing states the entire liability of MOTOROLA with respect to infringement of patents by the Product or any parts thereof.

Laws in the United States and other countries preserve for MOTOROLA certain exclusive rights for copyrighted MOTOROLA software such as the exclusive rights to reproduce in copies and distribute copies of such Motorola software. MOTOROLA software may be used in only the Product in which the software was originally embodied and such software in such Product may not be replaced, copied, distributed, modified in any way, or used to produce any derivative thereof. No other use including, without limitation, alteration, modification, reproduction, distribution, or reverse engineering of such MOTOROLA software or exercise of rights in such MOTOROLA software is permitted. No license is granted by implication, estoppel or otherwise under MOTOROLA patent rights or copyrights.

## VII. GOVERNING LAW:

This Warranty is governed by the laws of the State of Illinois, USA.

## ACCESSORIES

Motorola offers a number of accessories to enhance the productivity of your two-way radio. Many of the available accessories are listed below.

### ANTENNAS

NAD6502_R	VHF Heliflex Antenna 14cm, 146-174 MHz
HAD9742	VHF Stubby Antenna, 9cm, 146-162 MHz
HAD9743	VHF Stubby Antenna, 9cm, 162-174 MHz
NAE6522_R	UHF Heliflex Stubby Antenna 9cm, 438-470 MHz
NAE6483_R	Flexible Whip Antenna, 403-520 MHz
8505816K26	UHF Heliflex Stubby, 470-520 MHz

### AUDIO ADAPTER

0186662Z01	Accessory Adapter
------------	-------------------

## BATTERIES

NNTN4496_R	NiCd, 1100 mAh
NNTN4497_R	Li-Ion, 1800 mAh
NNTN4851_R	NiMH, 1300 mAh

### CARRY ACCESSORIES

RLN5496	Hard Leather Case with Belt Loop
HLN8255	3 inch Spring Action Belt Clip
RLN4815	Universal RadioPak
4280384F89	Replacement Belt Lengthener for RLN4815 Universal RadioPak
NTN5243	Shoulder Strap for Hard Leather Cases (attaches to D-Shaped Rings on case)
HLN9985	Waterproof Bag
HLN6602	Universal Chest Pack
RLN4570	Break-A-Way Chest Pack
1505596Z02	Replacement Strap for HLN6602 Universal Chest Pack

## CHARGERS

WPLN4138_R	Rapid Desktop Charger w/US Plug
WPLN4139_R	Rapid Desktop Charger w/Euro Plug
WPLN4140_R	Rapid Desktop Charger w/UK Plug
WPLN4142_R	Rapid Desktop Charger w/Argentina Plug
WPLN4161_R	Multi-Unit Rapid Charger w/US Cord
WPLN4162_R	Multi-Unit Rapid Charger w/Euro Plug
WPLN4163_R	Multi-Unit Rapid Charger w/UK Plug
WPLN4164_R	Multi-Unit Rapid Charger w/Argentina Plug

## HEADSETS

RLN5411	Ultra-Lite Breeze Behind the Head Headset
PMMN4001	Earset with Flexible Boom Microphone
HMN9013	Lightweight Headset w/o In-line PTT
RMN4016	Lightweight Headset with In-line PTT
RLN5238	Lightweight Headset with In-line PTT, NFL Style
HMN9021	Medium Weight Over the Head Dual Muff Headset

HMN9022	Medium Weight Behind the Head Dual Muff Headset
BDN6647	Medium Weight Single Speaker Headset
BDN6648	Heavy Duty Dual Muff Headset with Noise Canceling Microphone
5080371E66	Replacement Ear Pad for BDN6647
RMN5015	Heavy Duty Dual Muff Racing Headset (requires RKN4090 Headset Adapter Cable)
REX4648	Ear Pad and Windscreen Kit
RKN4090	Adapter Cable for use with RMN5015 Racing Headset
RMN4051	2-Way Hard Hat Mount, Black, Noise Reduction Rating (22db) (requires RKN4094 Adapter Cable)
RMN4054	Receive-Only Hard Hat Mount Headset with 3.5mm Right Angle Plug
RMN4055	Receive-Only Headband Style Headset with 3.5mm Right Angle Plug
HLN9133	VOX Adapter Kit (for use with Headsets only)
RKN4094	In-Line PTT Adapter for use with headsets RMN4051, RMN4052, and RMN4053 only)
PMLN4445	Ultra-Light Heaset with Boom Microphone

## SURVEILLANCE ACCESSORIES

HMN9752	Earpiece with Volume Control, 1-Wire (plastic earloop) (Beige)
HMN9727	Earpiece without Volume Control, 1-Wire (plastic earloop) (Beige)
RLN4894	Earpiece without Volume Control, 1-Wire (plastic earloop) (Black)
HMN9754	Earpiece with Microphone & PTT Combined, 2-Wire (Beige)
RLN4895	Earpiece with Microphone & PTT Combined, 2-Wire (Black)
RLN5198_P	Earpiece with Microphone & PTT Combined (Black) including Low Noise Kit, 2-Wire Surveillance Kit w/ Clear Comfortable Acoustic Tube (includes NTN8371)
BDN6720	Flexible Ear Receiver (receive only)
PMLN4443_B	Flexible Ear Receiver with Microphone & PTT Combined
HMN9036	Earbud with Microphone & PTT Combined, 2-Wire (Black)
PMLN4294	Earbud with Microphone & PTT Combined
PMLN4442	Earbud with Microphone & PTT Combined
HLN9132	Earbud Single Wire Receive Only (Black)

NTN8370	Extreme Noise Kit
5080384T72	Replacement Noise Attenuating Plug for NTN8370
NTN8371	Low Noise Kit
RLN4760	Small Custom Clear Earpiece, Right Ear
RLN4763	Small Custom Clear Earpiece, Left Ear
RLN4761	Medium Custom Clear Earpiece, Right Ear
RLN4764	Medium Custom Clear Earpiece, Left Ear
RLN4762	Large Custom Clear Earpiece, Right Ear
RLN4765	Large Custom Clear Earpiece, Left Ear
BDN6646	Standard 95 dB Ear Microphone with PTT Interface Module
BDN6706	Standard 95 dB Ear Microphone with VOX & PTT Interface Module
0180358B38	Ring PTT Switch for Ear Microphone System
0180300E83	Body PTT Switch for Ear Microphone System

## REMOTE SPEAKER MICROPHONES

HMN9030	Remote Speaker Microphone
RLN4904	Microphone Jacket for HMN9030
HKN9094	Replacement Cord for HMN9030
PMMN4008	Remote Speaker Microphone

## MISCELLANEOUS

TDN9327	Portable Radio Hanger
TDN9373	Portable Radio Hanger

## Turn the Radio On or Off

1. Rotate the **On/Off/Volume** knob clockwise. You will hear the self-test pass tone and see the LED indicator flash green.
2. Rotate the **On/Off/Volume** knob counterclockwise until you hear a click and the LED indicator turn off.

## Adjust the Volume

1. Turn the **On/Off/Volume** knob clockwise to increase the volume, or counterclockwise to decrease the volume.

## Select a Radio Channel

1. Turn the **Channel Selector** knob clockwise or counterclockwise until you reach the desired channel.

## Receive

1. Turn radio on and adjust volume to the desired level.
2. Select desired channel.
3. Listen for voice activity. The LED indicator flashes red while your radio is receiving.

## Transmit

1. Hold the radio vertically 1 to 2 inches (2.5 to 5 cm) from your mouth. Press the **PTT** button to talk. The LED indicator lights steady red while the call is being sent.
2. Release **PTT** button to listen.

## Start or Stop System Scan

1. Press the preprogrammed **Scan** button to start scan. The LED indicator blinks green during scan operation.
2. Press the preprogrammed **Scan** button again to stop scan.

## Start or Stop Auto Scan

1. Select a channel that has been preprogrammed for Auto Scan by your dealer/programmer.
2. Select a channel that has **not** been preprogrammed for Auto Scan by your dealer/programmer.

 
## Delete a Nuisance Channel During Scanning

1. While radio is on a nuisance channel, hold down preprogrammed **Nuisance Delete** button until you hear a tone.
2. Release **Nuisance Delete** button.



## EP450™ Quick Reference Card

Record the functions for your radio's programmable buttons in the table provided below. For further information, see page 17 of this User Guide.

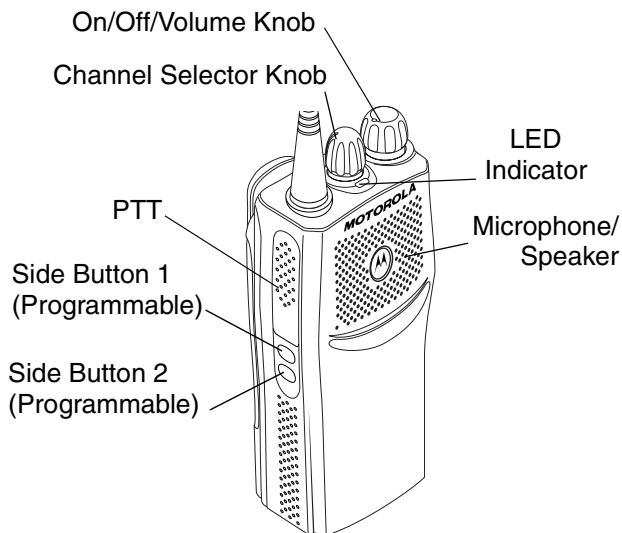

Button	Function	Short Press	Long Press	Hold Down	Page

## Restore Channels to the Scan List

Power off the radio then turn it on. – OR – Press the preprogrammed **Scan** button to stop the scan. The Deleted Nuisance Channels are restored to the scan list.  
– OR – Select a channel that has **not** been preprogrammed by your dealer/programmer to stop Scan. Once you return to the original channel, the deleted nuisance channels are restored to the scan list.

## LED Indicators

LED State/Color	Indication
<b>Radio Call</b>	
Red	Transmitting
Flashing Red	Receiving
Flashing Red	Channel Busy
<b>Scan</b>	
Flashing Green	Scanning for activity
<b>Call Alert</b>	
Flashing Yellow	Indicates receiving a Call Alert
<b>Selective Call</b>	
Flashing Yellow	Indicates receiving a Selective Call
<b>Sticky Monitor/Open Squelch</b>	
Yellow	While monitoring

## Audio Indicators for Programmable Buttons

Programmable Buttons	Positive Indicator Tone	Negative Indicator Tone
Scan	<b>Start</b>	<b>Stop</b>
Power Level	<b>High</b>	<b>Low</b>
Squelch	<b>Tight</b>	<b>Normal</b>
Repeater/Talkaround	<b>Does not use</b> repeater	<b>Uses</b> repeater
VOX	<b>Enabled</b>	<b>Disabled</b>
Silent Monitor/Open Squelch	–	<b>Enabled</b>
Option Board	<b>Enabled</b>	<b>Disabled</b>
Escalart	<b>Enabled</b>	<b>Disabled</b>

You can check battery charge status if your dealer has preprogrammed one of the programmable buttons. Hold down the preprogrammed **Battery Indicator** button. The charge status is shown on the display.

Battery Level	LED Indicator
Good	Green
Sufficient	Yellow
Low	Flashing Red
Very Low	None



Motorola, Inc.  
8000 West Sunrise Boulevard  
Ft. Lauderdale, FL 33322



MOTOROLA, and the Stylized M Logo are  
registered in the U.S. Patent and Trademark Office. All other  
product or service names are the property of their respective owners.  
© Motorola, Inc. 2003.  
All rights reserved. Printed in U.S.A.



HKLN4212A